

stasher

CARE & USAGE TIPS

- **KEEP IT CLEAN**
 - All Stasher bags are dishwasher-safe or can be cleaned with dish soap and water.
 - Please avoid tumbling them inside out.
 - Bottle brushes can be used to clean stains, corners and the seal.
- **TAKE CARE**
 - Easy open: hold your thumbs flat over each side of the seal, then press to seal.
 - To close: squeeze out excess air to keep things super seal and gently roll down and away from each other.
 - Sealed with sharp points in your bag or using it as a cutting board.
 - Avoid placing sharp objects in your bag or using it to avoid burns.
 - When heating, always wait until the bag has cooled slightly to avoid tearing.
 - Each Stasher is microwave and oven-safe, avoid temperatures above 400°F (205°C).
 - Always use oven mitts while handling Stasher bags to avoid burns.
 - When using in the oven or toaster oven, place Stasher bag on a baking sheet.

STASHERBAG.COM

- FOR MORE TIPS VISIT US ONLINE
- NOTRE SITE WEB
- PARA MAS CONSEJOS, VISITE
- WEITERE TIPS FINDEN SIE IM
- INTERNET UNTER
- BEZOEK ONS VOOR MEER TIPS ONLINE



- **get cookin'**
 - When heating, always wait until the bag has cooled slightly to avoid burning.
 - Each Stasher is microwave and oven-safe, avoid temperatures above 400°F (205°C).
 - Always use oven mitts while handling Stasher bags to avoid burns.
 - When using in the oven or toaster oven, place Stasher bag on a baking sheet.
 - When using in the oven or toaster oven, place Stasher bag in the oven or toaster oven, place Stasher bag on a baking sheet.



stasher[®]

save what matters™

